

- DE** Deutsches Handbuch online verfügbar.
- FR** Le manuel en français est disponible en ligne.
- ES** Manual en español disponible en línea
- PT** Manual em Português disponível online.
- SE** Svensk manual tillgänglig online.

- CZ** Návod v češtině dostupný online.
- HU** A magyar kézikönyv az interneten is elérhető.
- PL** Polski podręcznik dostępny na stronie internetowej
- NL** Nederlandstalige handleiding is online beschikbaar.

Plugs / Sockets

A 4-pin PWM plug
(Fan)



B 4-pin PWM socket
(Fan)



C 3-pin power plug
(Fan)



D 4-pin PWM socket
(on mainboard)




E 3-pin power socket
(on mainboard)




If there is only one 4-pin PWM socket on the mainboard


1

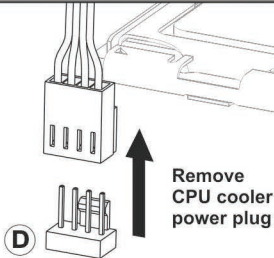


2

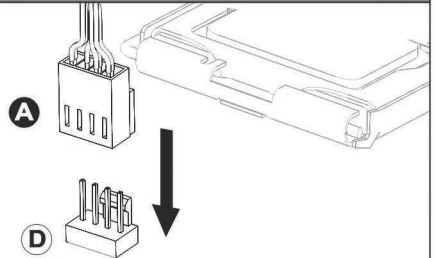

3

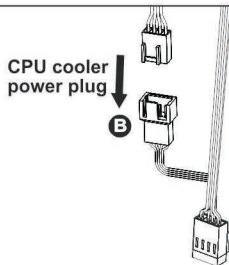


4 *Optional*

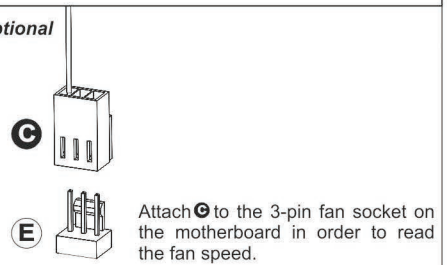

If connecting more than one fan


With the PWM Sharing Technology (PST), you can install more than one **ARCTIC F8/F9/F12 (Pro) PWM** fan in your system*. After installing one **ARCTIC F8/F9/F12 (Pro) PWM** fan:

1

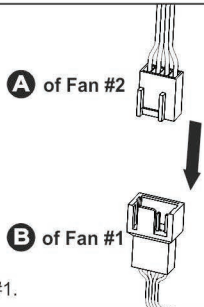

Attach **A** of fan #2 to **B** of fan #1.


2

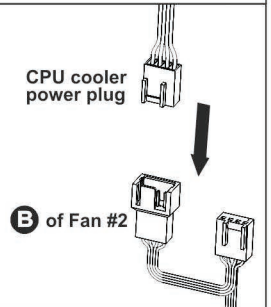

Attach the CPU cooler power plug **C** to of fan #2.

* The PST supports up to 5 fans

If there is an extra 4-pin PWM socket on the mainboard

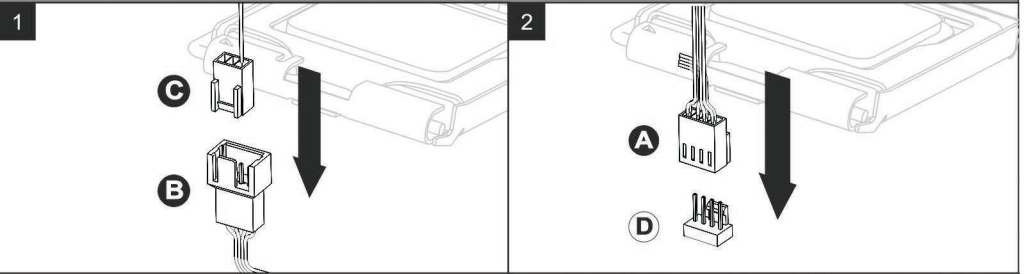

To activate PWM control

In the motherboard BIOS, you can activate and configure the PWM fan speed control.

Please refer to your motherboard manual regarding the settings in your BIOS, or visit our website www.arctic.ac for further information.

*The maximum current for all fans is 0.7A. Please check with the motherboard manufacturer in case it exceeds this limit.

Limits of Warranty

Warranty coverage does not include the following:

- A faulty product that leads to harm or damage to other products
- Damage of product as a result of other product components
- Incorrect method of operation or use of product not for intended use
- Any form of alteration to original product
- Inability to install the product as a result of incompatibility with other components

ARCTIC Switzerland

Huobstrasse 4
8808, Pfäffikon, Switzerland
www.arctic.ac

Copyright®

2010 ARCTIC Switzerland. All Rights Reserved.

No part of this manual including the products described in it, may be reproduced, transmitted, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ARCTIC Switzerland. In no event shall ARCTIC its directors or employees be liable for any indirect damages, incidental or consequential damages arising from any defect or error in this manual or product.